


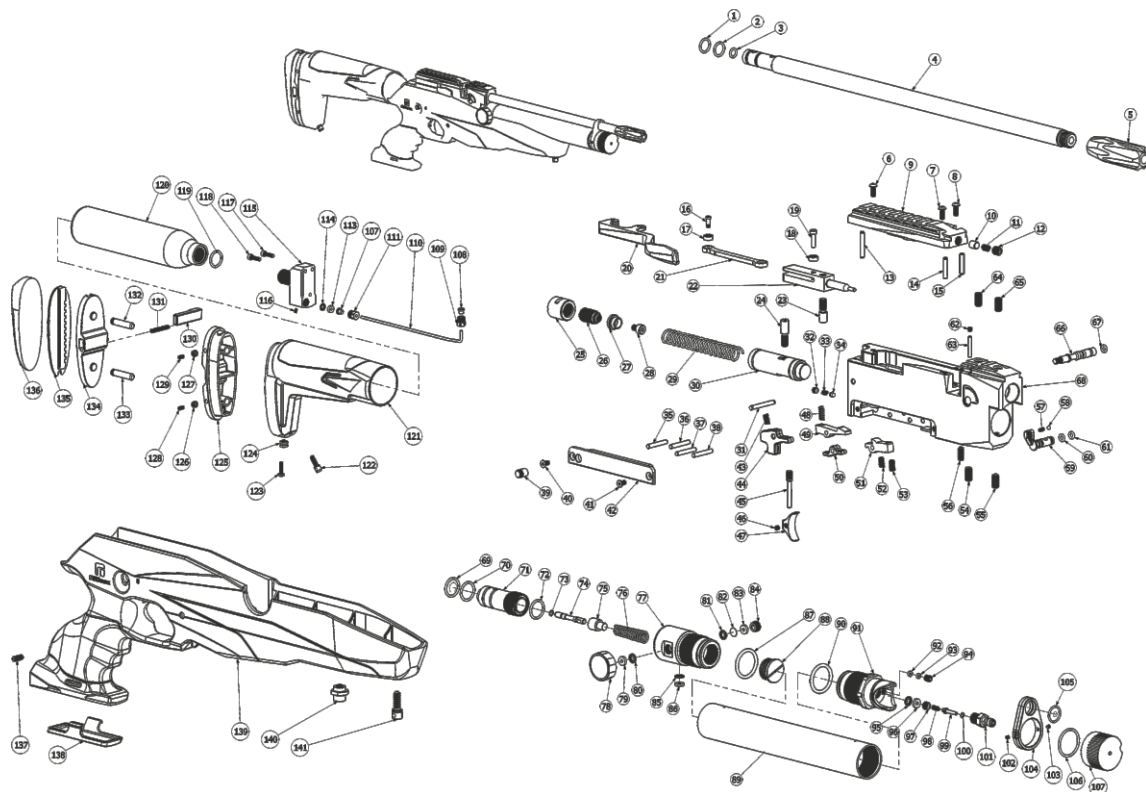

	Balloon No.	Part Code / Standard	Part Name
Barrell Group	1	O-Ring	9.50 x 1.50
	2	O-Ring	9.50 x 1.50
	3	O-Ring	4.50 x 1x50
			5.50 x 1x50
			6.50 x 1.50
4	TMA - 3-6		Barrell 4.50 mm
			Barrell 5.50 mm
5	TMA - 3-1		Barrell 6.35 mm
			Moderator
Chassiss Group	6	ISO 7380	M3 x 8 - Button Head Screw
	7	ISO 7380	M3 x 8 - Button Head Screw
	8	ISO 7380	M3 x 8 - Button Head Screw
	9	TMA - 1-26	Top Cover
	10	TMA - 1-25	Counter Pin
Chassiss Group	11	TMA - 1-24	Counter Pin Spring
	12	ISO 4026	M6 x 6 - Flat Point SetScrew
	13	ISO 8734	3 x20 - Parallel Pin
	14	ISO 8734	3 x16 - Parallel Pin
	15	ISO 8734	3 x16 - Parallel Pin
Chassiss Group	16	TMA - 1-27	Cocking Lever Link Rear Screw
	17	Rulman	3x7x3
	18	Rulman	3x7x3
	19	TMA - 1-31	Cocking Lever Link Front (Long) Pin
	20	TMA - 1-28	Cocking Lever
Chassiss Group	21	TMA - 1-34	Cocking Lever Link
			Pellet Pusher - 4.50 mm
			Pellet Pusher - 5.50 mm
			Pellet Pusher - 6.35 mm
	22	TMA - 1-41	Hammer Carrier Screw
Chassiss Group	23	TMA - 1-30	Hammer Screw
	24	TMA - 1-60	Hammer Spring Base Body
	25	TMA - 1-57	Hammer Spring Base Inner Piece
	26	TMA - 1-58	Hammer Spring Base Ring
	27	TMA - 1-62	Hammer Spring
Chassiss Group	28	ISO 4762	M4 x 6 - Hex Socket Head Screw
	29	TMA - 1-56	Hammer Spring
	30	TMA - 1-61	Hammer
	31	ISO 8734	3 x25 - Parallel Pin
	32	ISO 4026	M4 x 4 - Cup Point SetScrew
Chassiss Group	33	TMA - 1-17	Safety Catch Spring
	34	TMA - 1-18	Safety Catch
	35	ISO 8734	3 x 20 - Parallel Pin
	36	ISO 8734	3 x 20 - Parallel Pin
	37	ISO 8734	3 x 20 - Parallel Pin
Chassiss Group	38	ISO 8734	3 x 20 - Parallel Pin
	39	TMA - 1-1	Safety Cap
	40	ISO 10642	M3 x 6 - Socket Countersunk Head Screw
	41	ISO 10642	M3 x 6 - Socket Countersunk Head Screw
	42	TMA - 1-40	Side Cover
Chassiss Group	43	TMA - 1-46	Trigger Finger Piece Rod Base Spring
	44	TMA - 1-47	Trigger Finger Piece Rod Base
	45	TMA - 1-48	Trigger Finger Piece Rod
	46	ISO 4026	M3 x 3 - Flat Point SetScrew
	47	TMA - 1-5	Trigger Finger Piece
Chassiss Group	48	TMA - 1-50	Hammer Holder Spring
	49	TMA - 1-51	Hammer Holder
	50	TMA - 1-49	Trigger Lever
	51	TMA - 1-54	Hammer Holder Sear
	52	TMA - 1-52	Hammer Holder Sear Spring
Chassiss Group	53	ISO 4026	M4 x 8 - Flat Point SetScrew
	54	ISO 4026	M5 x 10 - Flat Point SetScrew
	55	ISO 4026	M5 x 10 - Flat Point SetScrew
	56	ISO 4026	M4 x 10 - Flat Point SetScrew
	57	TMA - 1-11	Power Adjustment Valve Ball Spring
Chassiss Group	58	Steel Ball	d2.50 mm
	59	TMA 1-29	Power Adjustment Valve
	60	O-Ring	3.50 x 1.50
	61	O-Ring	3.50 x 1.50
	62	ISO 4026	M3 x 3 - Flat Head SetScrew
Chassiss Group	63	ISO 8734	2.5 x 16 - Parallel
	64	ISO 4026	M5 x 10 - Flat Point SetScrew
	65	ISO 4026	M5 x 10 - Flat Point SetScrew

Front Air Tank Group	66	TMA - 1-2	Safety
	67	O-Ring	3 x 1.50 - Red O-Ring
	68	TMA - 1-65	Chassiss
	69	O-Ring	15 x 2
	70	O-Ring	16 x 2
Front Air Tank Group	71	TMA - 2-22	Hammer Valve Housing
	72	O-Ring	16 x 2
	73	O-Ring	3.50 x 1
	74	TMA - 2-27	Hammer Valve
	75	TMA - 2-28	Hammer Valve Pad
Front Air Tank Group	76	TMA - 2-25	Hammer Valve Spring
	77	TMA - 2-29	Air Tank Rear Tap
	78	TMA - 2-14	Pressure Gauge
	79	TMA - 2-15	Pressure Gauge Seal
	80	Bonded Washer	M5 - Bonded Washer
Front Air Tank Group	81	Bonded Washer	M5 - Bonded Washer
	82	TMA - 2-19	Safety Screw Seal
	83	TMA - 2-18	Copper Burst Disk
	84	TMA - 2-17	Safety Screw
	85	Bonded Washer	M5 - Bonded Washer
Front Air Tank Group	86	TMA - 2-35	Sleeve Coupling Seal
	87	O-Ring	24.2 x 3 / NBR 90
	88	TMA - 2-20	Air Tank Rear Lid Inner Lid
	89	TMA - 2-30	Alluminum Air-Tube
	90	O-Ring	24.2 x 3 / NBR 90
Front Air Tank Group	91	TMA - 2-13	Air Tank Front Tap
	92	TMA - 2-9	Discharge SetScrew Seal
	93	TMA - 2-9	Discharge SetScrew Seal
	94	ISO 4029	M6 x 6 - Cup Point SetScrew
	95	O-Ring	25 x 2
Front Air Tank Group	96	Bonded Washer	M5 - Bonded Washer
	97	TMA - 2-34	Filling Port Seal
	98	TMA - 2-32	Filling Port Valve Spring Base
	99	TMA - 2-6	Filling Port Valve Spring
	100	TMA - 2-7	Filling Port Valve
Front Air Tank Group	101	O-Ring	3 x 1
	102	TMA - 2-33	Filling Port
	103	TMA - 2-2	8-Ring
	104	O-Ring	14 x 1.50
	105	ISO 4026	M 3 x 3 - Flat Head SetScrew
Front Air Tank Group	106	ISO 4026	M 3 x 3 - Flat Head SetScrew
	107	TMA - 2-1	Air Tank Cap
Rear Air Tank Group	108	TMA - 4-22	Sleeve Coupling Inner Piece
	109	TMA - 4-21	Sleeve Coupling Outer Piece
	110	TMA - 4-20	Copper Pipe
	111	TMA - 4-21	Sleeve Coupling Outer Piece
	112	TMA - 4-22	Sleeve Coupling Inner Piece
Rear Air Tank Group	113	TMA - 4-23	Sleeve Coupling Seal
	114	Bonded Washer	M5 - Bonded Washer
	115	TMA - 4-2	Tormenta L-Block
	116	ISO 4026	M 3 x 3 - Flat Head SetScrew
	117	ISO 4762	M3 x 5 - Hex Socket Head Screw
Rear Air Tank Group	118	ISO 4762	M3 x 5 - Hex Socket Head Screw
	119	O-Ring	18 x 2.5
	120	TMA - 4-1	Air Tank
	121	TMA - 4-19	Air Tank Housing
	122	TMA - 4-17	Sling Anchor (Rear)
Rear Air Tank Group	123	DIN 7981	d4.2 - L15 - Sheet Metal Screw
	124	TMA - 4-18	Air Tank Housing Anchor
	125	TMA - 4-11	Stock Fixed Piece Base
	126	TMA - 4-13	Stock Fixed Piece Base Upper SetScrew Anchor
	127	TMA - 4-12	Stock Fixed Piece Base Lower SetScrew Anchor
Rear Air Tank Group	128	ISO 4026	M 4 x 8 - Flat Head SetScrew
	129	ISO 4026	M 4 x 8 - Flat Head SetScrew
	130	TMA - 4-6	Shoulder Rest Adjustment Button
	131	TMA - 4-7	Shoulder Rest Adjustment Button Spring
	132	TMA - 4-10	Stock Fixed Piece Upper Rod
Stock	133	TMA - 4-9	Stock Fixed Piece Lower Rod
	134	TMA - 4-8	Stock Fixed Piece
	135	TMA - 4-4	Shoulder Rest Frame
	136	TMA - 4-5	Stock Shoulder Rest
Stock	137	ISO 4766	M4 x 10 - Channeled SetScrew
	138	TMA - 5-4	Stock Handgrip Cap
	139	TMA - 5-1	Stock
	140	TMA - 5-3	Picatiny Assembly Screw Bushing
	141	TMA - 5-2	Sling Anchor (Front)